 






# HP Deskjet 5700 series

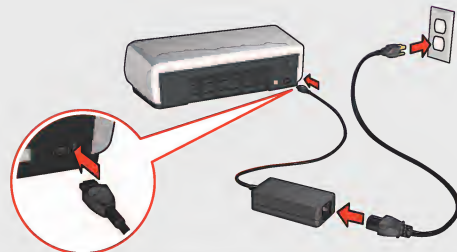

**3** 白い用紙をセットします。伸縮トレイを引き出します。  
Load white paper. Pull out extension.

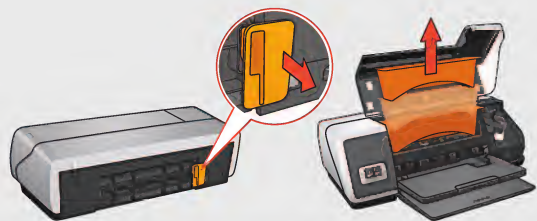

**2** ピンクつまみを引っ張って、透明テープをはがします。  
Pull pink tab to remove clear tape.

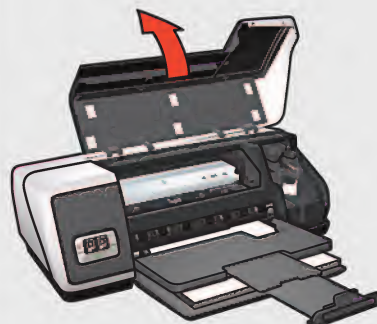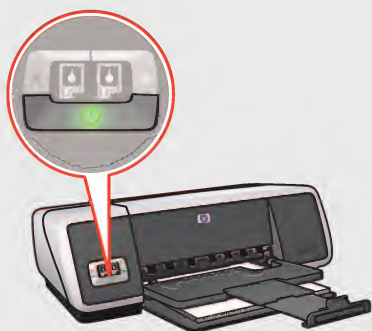

銅板の部分に触らないでください。  
Do not touch copper strip.

**7** カバーを閉じます。  
Close cover.



The diagram illustrates the connection of a USB cable. On the left, a USB cable is shown with a standard USB-A connector and a USB-B connector. In the center, a power supply unit (PSU) is shown with a USB-B port. A red arrow points from the USB-B connector of the cable to the USB-B port on the PSU. On the right, a device (likely a power supply or a similar component) is shown with a USB-A port. A red arrow points from the USB-A connector of the cable to the USB-A port on the device. The entire diagram is enclosed in a red-bordered box.

耐光性に優れた滑らかで美しい  
カラー写真を印刷するには、  
HP フォト プリント カートリッジを  
お買い求め下さい。

For virtually grain-free color photos that have exceptional fade resistance, purchase a photo print cartridge.



- 1 Insert the CD into the CD drive.
- 2 Double-click the CD icon in the Finder window.
- 3 Double-click the installer icon.
- 4 Accept the licensing agreement. Follow the installation instructions for your operating system.

- 1 Click **Install**.
- 2 Click **Quit** when the installation is complete.

- 1 Click **Install**.
- 2 Click **Continue** to close all open programs.
- 3 Click **Restart** to restart your computer.
- 4 After your computer restarts, open **Chooser** to add the printer.